



## PN: BPKNB25CSOR

CLAMSHELL FOR KENWOOD NX3220 /  
NX3320, TK2170 / TK3170, TK2360 /  
TK3360, OTHER RADIOS. HOLDS 6 AA  
ALKALINE BATTERIES.

- 1 To install alkaline batteries, remove cover by pressing the two latches (A) down and pushing away from battery holder (B).



- 2 Position six alkaline batteries as indicated by polarity markings on inside of battery holder housing.

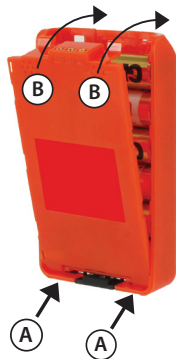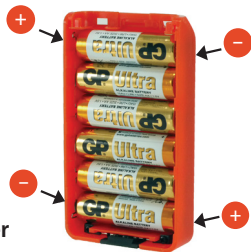

- 3 To reinstall cover, insert locking tabs on cover (A) into openings in battery holder and push top of cover onto battery holder until latches lock (B).